


Instructions for ODL Automatic Gas Bottle Change over unit


Choose which Gas Bottle that should be Primary

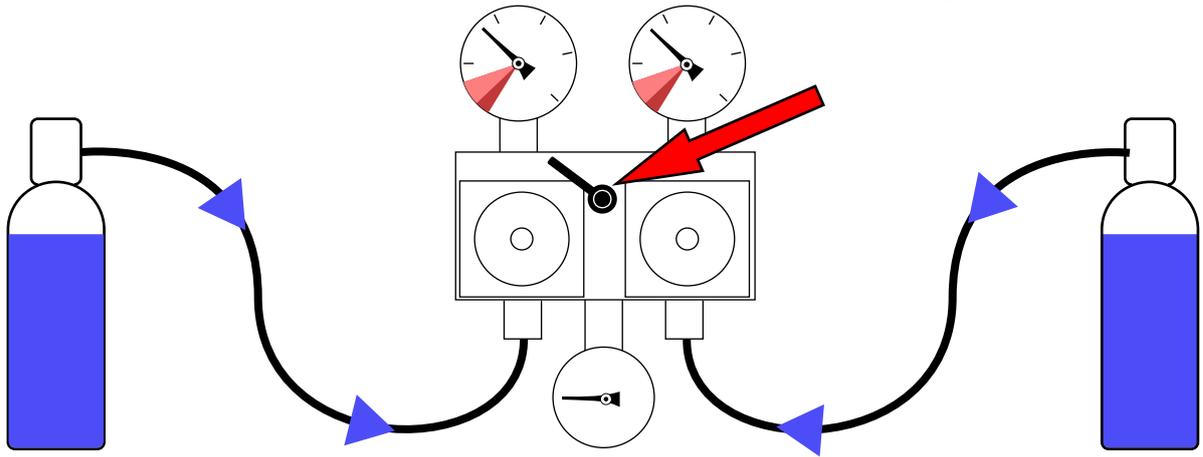

Full - In Use- Primary

Full - Spare


When the Gas Bottle is empty, the unit automatically switches over to the other Gas Bottle.

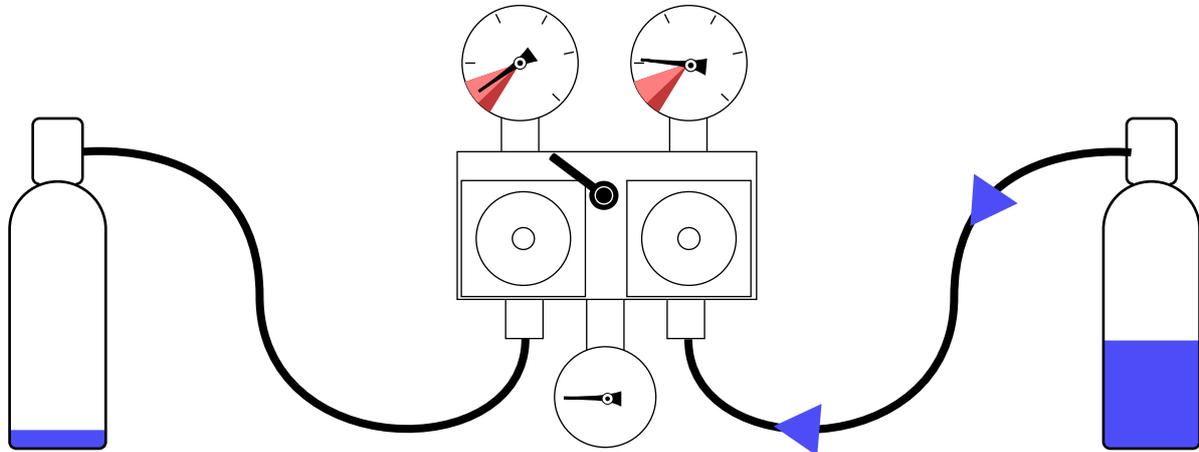

Empty

In Use

When changing over to a new Gas Bottle, turn the handle over towards the Gas Bottle that is already in use.

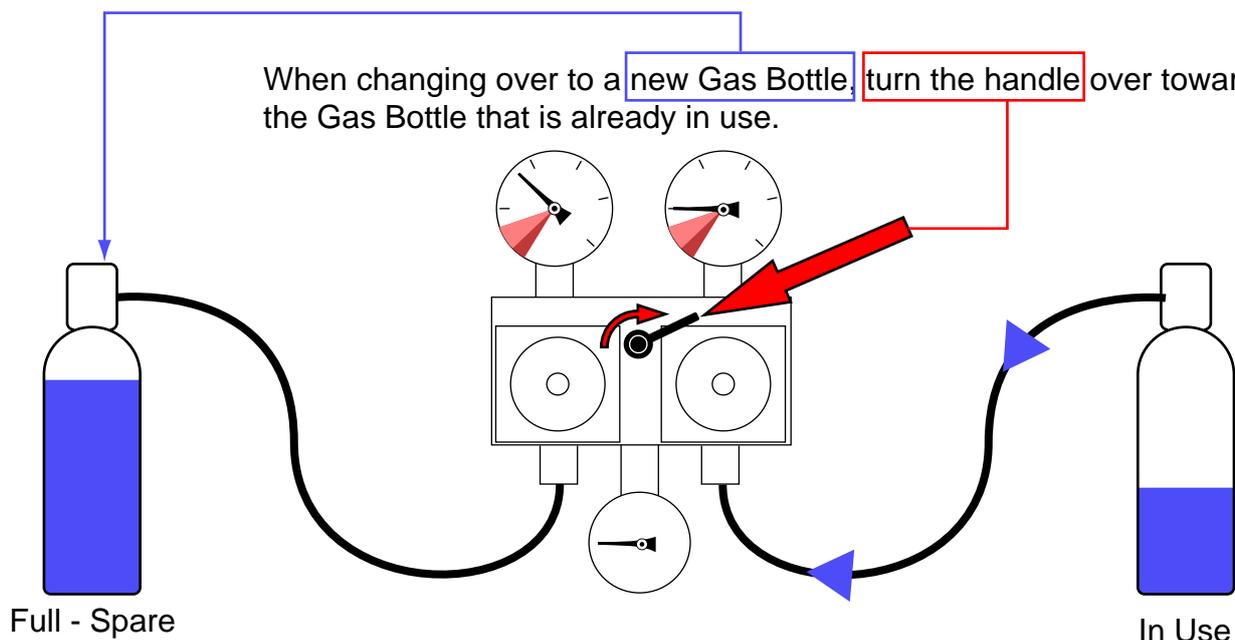

Full - Spare

In Use