
BCS-22 is a dispenser that satisfies the requirements for portioning and volume measuring today and in the future. The small size, splash protected connections and easy-to-use functions are some of the many features. The electronic identification keys increase safety and activate different functions depending on user access. BCS-22 controls two beer lines. Each line and portion size is be programmed separately. In addition, sales results can be programmed in order to count up sales of the same product from different lines. One-touch pressing of the buttons activates most of the functions used. The BCS-22 dispenser can also be used to portion cider or wine.

Technical data:

- Controls two beer lines.
- Two programmable portin sizes per line.
- Daily and periodical sales results.
 Fill-feature for odd portion sizes.
- Portion STOP feature.
- Activation with electronic kevs.
- Option to connect secondary panels for portioning.
- Power reduction on valves (Sirai).
- Valve protection.
- Dimensions: (W,H,D) 220 mm x 48 mm x 40 mm.
- Supply voltage: 24V AC 60 VA transformer.

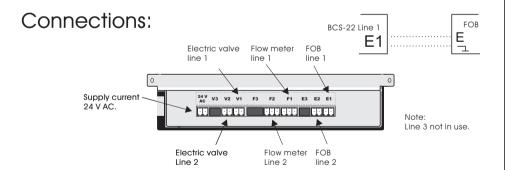

Manufacturer:

WWB DRINK SYSTEM AB Sepänkyläntie 212 65610 MUSTASAARI **FINLAND**

Phone: +358-6-322 3074 Fax: +358-6-3223076info@wwbdrinksystem.fi www.wwbdrinksystem.fi

BCS-22 **SERVICE MANUAL REV 3.1a E**







Serial number and software version:



BCS-22 Rev 2.0a E SERIAL No.: 2XXXXXX

Press the CLR-button to view the dispenser's serial number and software version.

Service:



SERVICE

Activate the service menu by inserting the yellow key in the keyhole.





The text "SERVICE IN PROGRESS" is shown in the display. The text starts flashina if the service kev is removed. Remove the service key and push the MINUS-button to erase the text in the display.

Cleaning / rinsing function:



CLEAN Choose line Choose which line that should be opened by pushing one of the portioning buttons for either line one or line two. Close the line by pushing the same button once again or by pushing the CLR-button.

Measure setup:



MEASURE SETUP Choose line

Choose line and portion for which the measure should be set-up by pushing one of the portioning buttons for line one or line two.

MEASURE SETUP Line 1 Small

00330

MEASURE SETUP Choose line

You can change the number of pulses by pushing the PLUS-, MINUS-, or the CLR-button. The MINUSbutton moves the cursor, and the PLUS-button changes the number. Reset the measure to ZERO (0) by pushing the CLR-button.

A sample portion of the set-up measure is dispensed by pushing the portioning button for the selected line.

If the measure is 0 (zero) a new setup can be made by pushing and holding the chosen portioning button. Release the button when the desired measure has been obtained. Confirm the pulse count (the portion size) with the ENT-button, or adjust the measure with the PLUS- and MINUSbutton.

Confirm the measure setup by pushing the ENT-button.

Programming of sales results:

YES



GROUP A B

Product lines with the same letter (A or B) are counted together in the sales results. Line 1 is always A and can not be changed. The PLUS-button changes the letter and the MINUSbutton moves the cursor.

Valve protection:



FUNCTION SETUP VALVE PROTECT.

1

Activate/deactivate the feature by pushing the PLUS-button.

YES = the valve closes after the preset time if the valve is open and no flow is detected. NO = the valve is not protected from overheating.

Fill:



FUNCTION SETUP YES/NO

1

Activate/deactivate the feature by pressing the PLUS-button. The menu activates fill-feature which can be used to manually portion odd measures. During sales mode press the PLUS-button to open the electric valve and to fill the glass. Release the button when the desired measure has been obtained.

If NO is chosen the fill-feature is not in use during sales mode.

Portion stop:





1

Activate/deactivate the feature by pressing the PLUS-button. The menu activates portion stop feature which can be used to stop the dispensing of the selected portion size (in case the wrong button was pushed by mistake). Any portion that is stopped using the STOP feature will not be registered as sales.